

# NEO - Face the Future



- **Unique** - Horizontal Switches available for Horizontal Decor
- **Stylish** - Ingenious combination of matt and gloss finish along with a fresh look through use of LED technology
- **Convenient** - Switches with soft, luminiscent "locators" to locate the switch in dark
- **Dual Tone Colours** - Standard colours include Grey and White incorporating Blue and White LED respectively



E3033H1EBGS




E3032H1EWWW



E3032H1FWWW



E3032V1EBGS

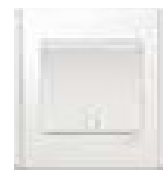

E3031V1EWWW



E3032V1FWWW

Description	Horizontal Dolly Reference	Unit MRP [₹]	Vertical Dolly Reference	Unit MRP [₹]
<b>Grey Switches with Blue LED Indicator</b>				
10AX 250V 1 Gang 1 Way Switch	E3031H1EBGS	508	E3031V1EBGS	508
10AX 250V 1 Gang 2 Way Switch	E3031H2EBGS	592	E3031V2EBGS	592
10AX 250V 2 Gang 1 Way Switch	E3032H1EBGS	792	E3032V1EBGS	792
10AX 250V 2 Gang 2 Way Switch	E3032H2EBGS	934	E3032V2EBGS	934
10AX 250V 3 Gang 1 Way Switch	E3033H1EBGS	1160	E3033V1EBGS	1160
10AX 250V 3 Gang 2 Way Switch	E3033H2EBGS	1370	E3033V2EBGS	1370
10AX 250V 4 Gang 1 Way Switch	E3034H1EBGS	1450	-	-
10AX 250V 4 Gang 2 Way Switch	E3034H2EBGS	1715	-	-
<b>White Switches with White LED Indicator</b>				
10AX 250V 1 Gang 1 Way Switch	E3031H1EWWW	492	E3031V1EWWW	492
10AX 250V 1 Gang 2 Way Switch	E3031H2EWWW	568	E3031V2EWWW	568
10AX 250V 2 Gang 1 Way Switch	E3032H1EWWW	788	E3032V1EWWW	788
10AX 250V 2 Gang 2 Way Switch	E3032H2EWWW	906	E3032V2EWWW	916
10AX 250V 3 Gang 1 Way Switch	E3033H1EWWW	1110	E3033V1EWWW	1110
10AX 250V 3 Gang 2 Way Switch	E3033H2EWWW	1290	E3033V2EWWW	1290
10AX 250V 4 Gang 1 Way Switch	E3034H1EWWW	1410	-	-
10AX 250V 4 Gang 2 Way Switch	E3034H2EWWW	1675	-	-
<b>White Switches with White Fluorescent Indicator</b>				
10AX 250V 1 Gang 1 Way Switch	E3031H1FWWW	490	E3031V1FWWW	490
10AX 250V 1 Gang 2 Way Switch	E3031H2FWWW	552	E3031V2FWWW	552
10AX 250V 2 Gang 1 Way Switch	E3032H1FWWW	782	E3032V1FWWW	782
10AX 250V 2 Gang 2 Way Switch	E3032H2FWWW	912	E3032V2FWWW	912
10AX 250V 3 Gang 1 Way Switch	E3033H1FWWW	1105	E3033V1FWWW	1105
10AX 250V 3 Gang 2 Way Switch	E3033H2FWWW	1305	E3033V2FWWW	1305
10AX 250V 4 Gang 1 Way Switch	E3034H1FWWW	1430	-	-
10AX 250V 4 Gang 2 Way Switch	E3034H2FWWW	1690	-	-

# NEO - Face the Future



E3031VBP>GS-OS



E3031VD20>EWWW-OS



E3426/10IS>GS-OS



EH3015/6>GS-OS



E3031TV>GS-OS



E3031RJ5E>WW-OS



E3031USB\_GS



E3031USB\_WW



E3032HDM>GS-OS



E3031EKTH>WW-OS

Description	Reference for Grey	Unit MRP ₹	Reference for White	Unit MRP ₹
<b>Bell Push</b>				
4A 1 Way Horizontal Bell Push Switch	E3031HBP>GS-OS	1055	E3031HBP>WW-OS	1035
4A 1 Way Vertical Bell Push Switch	E3031VBP>GS-OS	1040	E3031VBP>WW-OS	1025
<b>DP Switches</b>				
1 Gang Horizontal 20A DP Switch with Blue LED for Grey Switch and White LED for White Switch	E3031HD20EBGS	882	E3031HD20EWWW	856
1 Gang Vertical 20A DP Switch with Blue LED for Grey Switch and White LED for White Switch	E3031VD20>EBGS-OS	860	E3031VD20>EWWW-OS	832
1 Gang 32A DP Rocker Switch with Blue LED for Grey Switch and White LED for White Switch	E3031DR32EBGS	1290	E3031DR32EWWW	1245
<b>Intermediate Switch</b>				
16AX Intermediate Switch with Blue LED for Grey Switch and White LED for White Switch	E3031VIA>EBGS-OS	1395	E3031VIA>EWWW-OS	1340
<b>Socket</b>				
15A 1 Gang Switch Socket Outlet Grey with Blue LED for Grey Socket and White LED for White Socket	E3015/15-EBGS-EX	1510	E3015/15-EWWW-EX	1470
10A International Socket	E3426/10IS>GS-OS	1180	E3426/10IS>WW-OS	1130
6A 1 Gang Switch Socket Outlet	EH3015/6>GS-OS	872	EH3015/6>WW-OS	838
6/16A 1 Gang Switch Socket Outlet	EH3015/16/6>GS-OS	1220	EH3015/16/6>WW-OS	1195
<b>Fan Regulators &amp; Dimmers</b>				
1 Gang Fan Control	E3031FRGS	1385	E3031FRWW	1255
1 Gang Dimmer with Blue LED for Grey Dimmer and White LED for White Dimmer	E3031HD>EBGS-OS	9000	E3031HD>EWWW-OS	8915
2 Gang Horizontal Dimmer with Blue LED for Grey Dimmer and White LED for White Dimmer	E3032HD>EBGS-OS	15790	E3032HD>EWWW-OS	15350
<b>Accessories</b>				
1 Gang TV Socket Outlet	E3031TV>GS-OS	788	E3031TV>WW-OS	770
2 Gang TV Socket Outlet	E3032TV>GS-OS	1535	E3032TV>WW-OS	790
4 Pin 1 Gang Telephone Outlet (CAT 3)	E3031RJ>GS-OS	912	E3031RJ>WW-OS	866
4 Pin 1 Gang 8 Pin Data Outlet (CAT 5E)	E3031RJ5E>GS-OS	2420	E3031RJ5E>WW-OS	2330
4 Pin 2 Gang Telephone Outlet (CAT 3)	E3032RJ>GS-OS	1630	E3032RJ>WW-OS	1535
4 Pin Telephone Outlet (CAT 3) + 8 Pin Data Outlet (CAT 5E)	E3032TD>GS-OS	2980	E3032TD>WW-OS	2885
1G Keystone Plate Shuttered	E3031RJK>GS-OS	522	E3031RJK>WW-OS	504
2G Keystone Plate Shuttered	E3032RJK>GS-OS	546	E3032RJK>WW-OS	538
1 x 2.1A USB Charger <b>NEW</b>	E3031USB_GS	3700	E3031USB_WW	3540
25A Connection Unit	E3031TB>GS-OS	692	E3031TB>WW-OS	664
1 Gang Blank Plate	E3030X>GS-OS	446	E3030X>WW-OS	426
2 Gang Blank Plate	ET3030X>GS-OS	996	ET3030X>WW-OS	962
<b>Hotel Series</b>				
2 Gang "Do Not Disturb" & "Please Clean Up" Combined (Horizontal)	E3032HDM>GS-OS	4605	E3032HDM>WW-OS	4465
1 Gang "Do Not Disturb" & "Please Clean Up" Combined (Vertical)	E3030VDM>GS-OS	4290	E3030VDM>WW-OS	4055
1 Gang Bell Push with "Please Clean Up" Combined (Vertical)	E3031VBP>GS-OS	3520	E3031VBP>WW-OS	3390
1 Gang Bell Push with "Do not Disturb" Combined (Vertical)	E3031VBPD>GS-OS	3520	E3031VBPD>WW-OS	3390
1 Gang Bell Push with "Do Not Disturb" & "Please Clean Up" Combined (Vertical)	E3031VBPDM>GS-OS	3520	E3031VBPDM>WW-OS	3390
Electronic Key Card Switch (Horizontal)	E3031EKTH>GS-OS	10340	E3031EKTH>WW-OS	10065
115/240V Shaver Outlet (Vertical)	ET3727V>GS-OS	5065	ET3727V>WW-OS	4965